


BENELLI VANITIES International Customization

Illustrations may not reflect every exact model

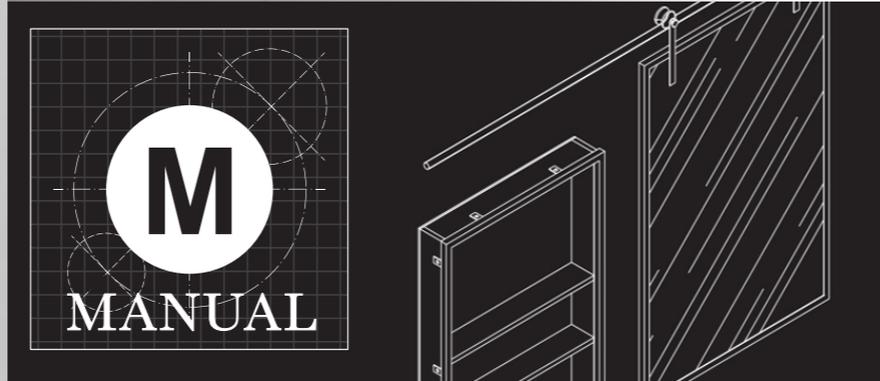

INSTALLATION

ELLI 1300-SM

Congratulations on choosing the experience center of international bathroom living. These quality, service and design ensure the elegant life of bathroom space.

To install your bathroom products please ensure you read the following instructions below.

IMPORTANT


All vanities must be installed by a licenced plumber.*
 Vanities and tops must be installed onto finished surfaces.

It is imperative that all bathroom installations are ventilated to meet standards.
FAILURE TO PROVIDE VENTILATION TO MEET THESE STANDARDS WILL VOID MANUFACTURERS WARRANTY.


Prior to installation

It is important that the product is unpacked and inspected for any damage, defects and that the product supplied is correct. If any of the above is apparent, **DO NOT PROCEED WITH THIS INSTALLATION, AND IMMEDIATELY CONTACT THE STORE OF PURCHASE.**

* All installations should be carried out by a qualified tradesman in compliance with the national Plumbing & Drainage Code and any State or Local Authority Regulations, in accordance with AS/NZS 3500 series of standards and AS/NZA 6400.

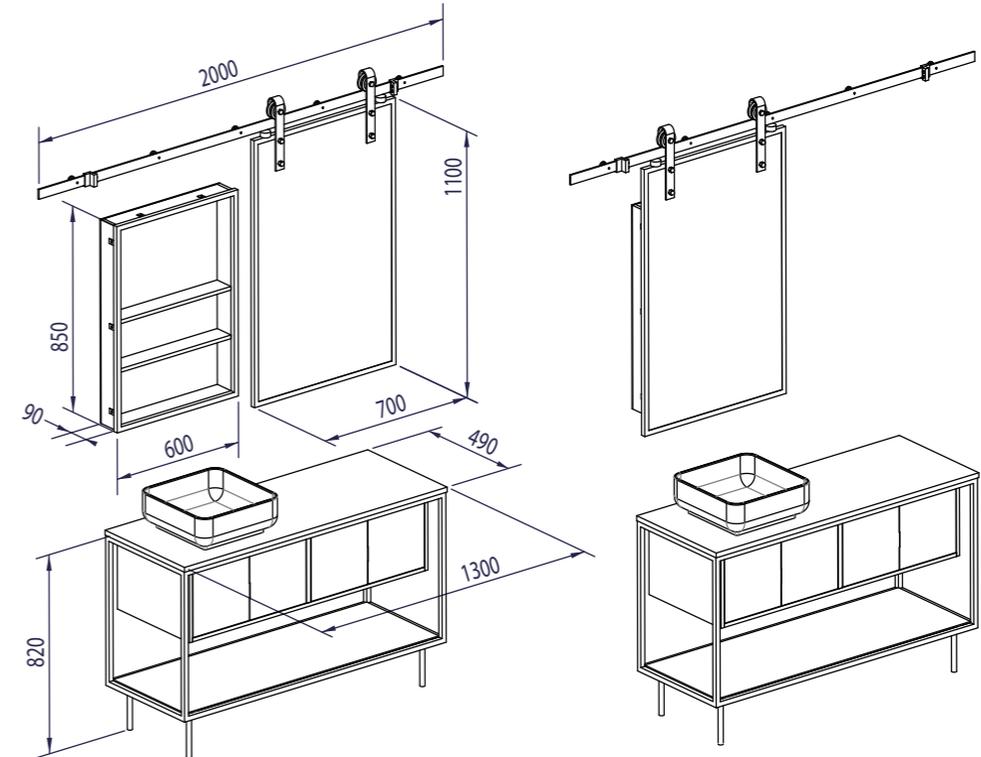

TOOLS REQUIRED FOR INSTALLATION

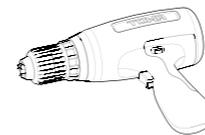

Electric/Battery Drill



Drill Bit



Tape Measure (3m-5m)




Spirit Level



Kitchen & Bathroom
Non-Acidic Silicone




Pencil



Screw Driver

1

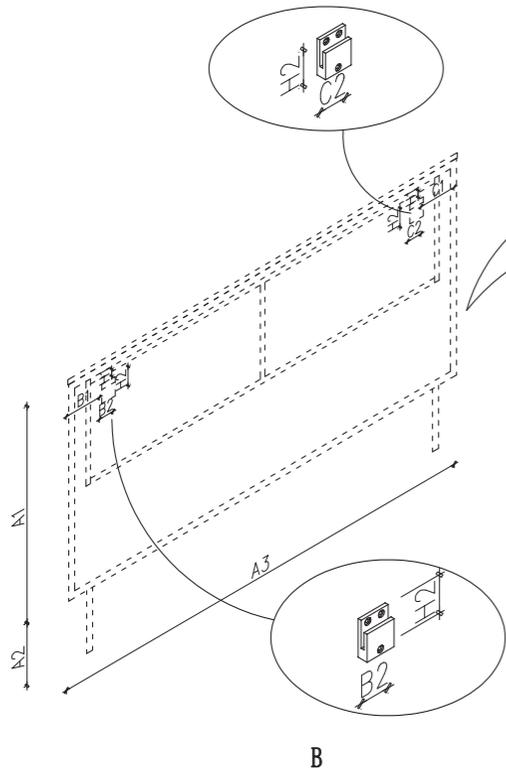


Use spirit level, according to the vanity size and the wall bracket size (Figure A), mark the wall brackets level on the wall

Place the other half of the wall brackets on the drawn wall bracket area (Figure B) (B1-B1, B2-B2, H1-H1, C1-C1, C2-C2, H2-H2), draw the wall according to the hanging code position Punch position.

Note: Draw the wall punching position according to the hanging code position

According to the drawn hole size, determine the wall hole size, punch (open hole $\phi 6\text{MM}$)


2

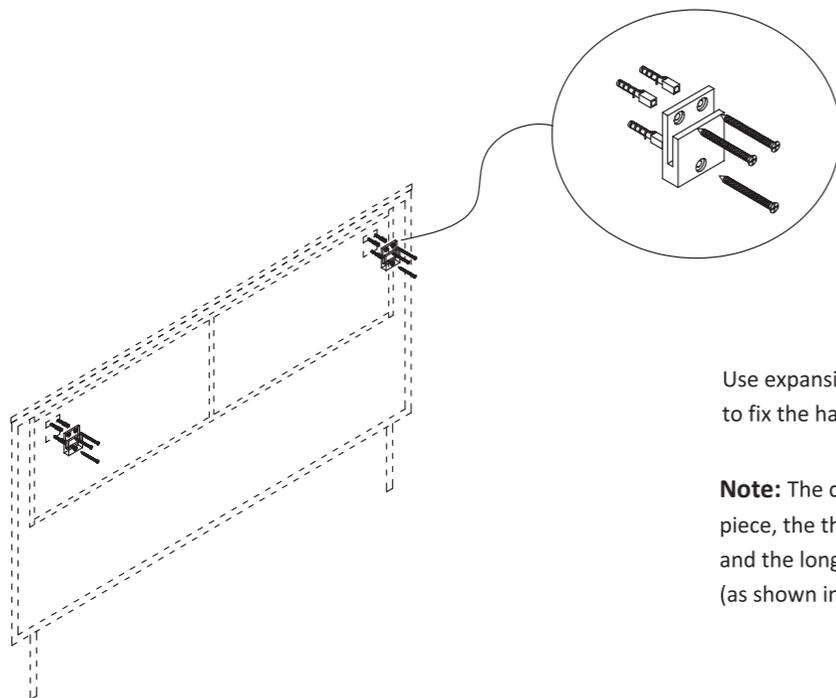

Use expansion tubes and screws to fix the hanger on the wall

Note: The direction of the wall hanging piece, the thinner side is facing upwards, and the longer side is fixed against the wall (as shown in the picture)


3

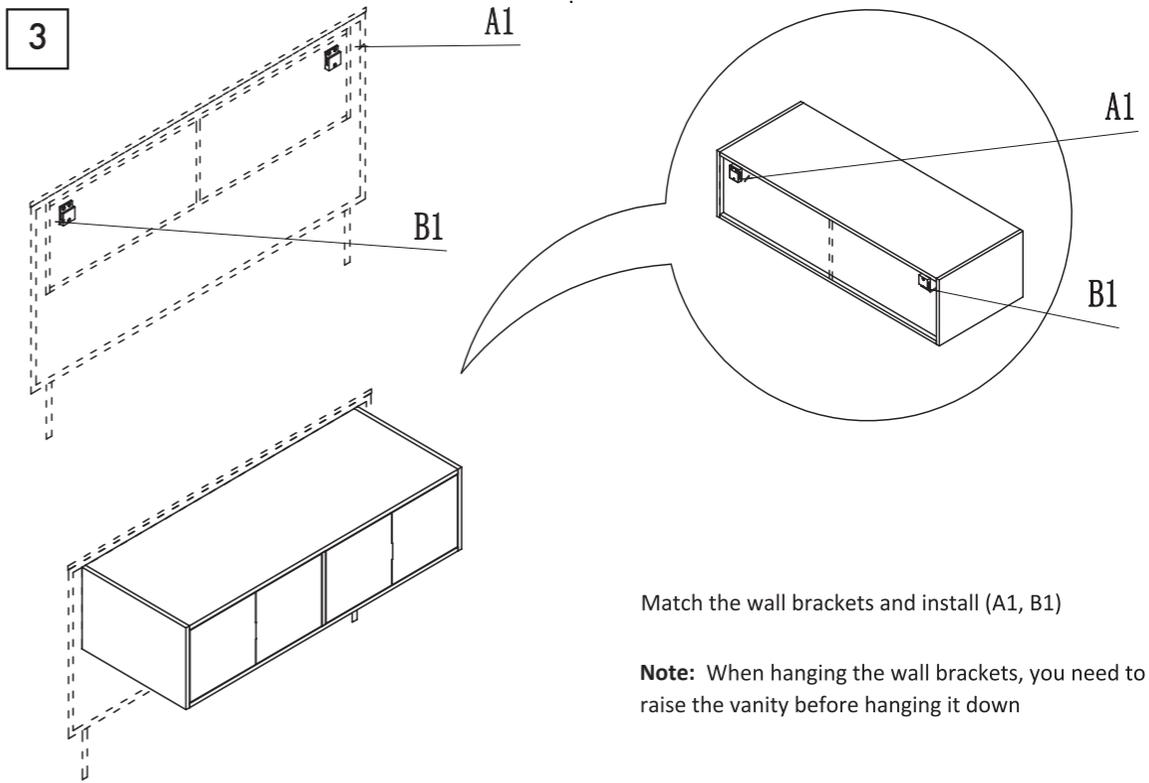

Match the wall brackets and install (A1, B1)


Note: When hanging the wall brackets, you need to raise the vanity before hanging it down

4

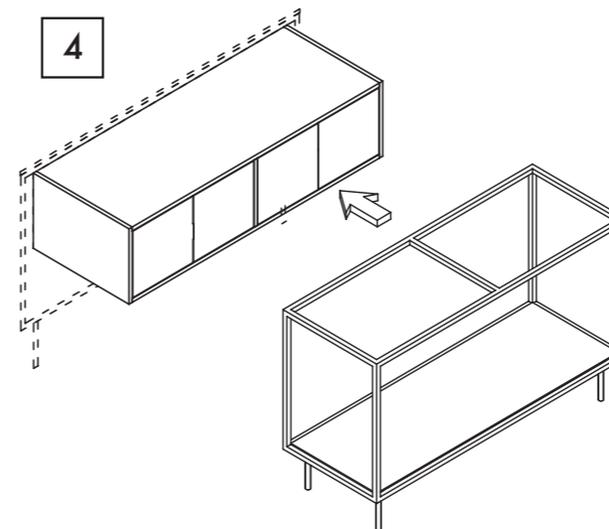

Push in the metal frame according to the cabinet size drawn before, and finally put it on the countertop.

5




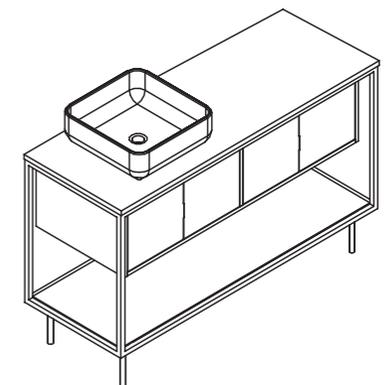



Finish installation

IMPORTANT: All fixing screws that hold the vanity unit onto the wall must fix through wall into horizontal noggin. Failure to do so will result in vanity falling off wall.

INNER WALL CABINET (WITH STEEL SLIDING MIRROR & TRACK)

BENELLI ELLI 1300-SM

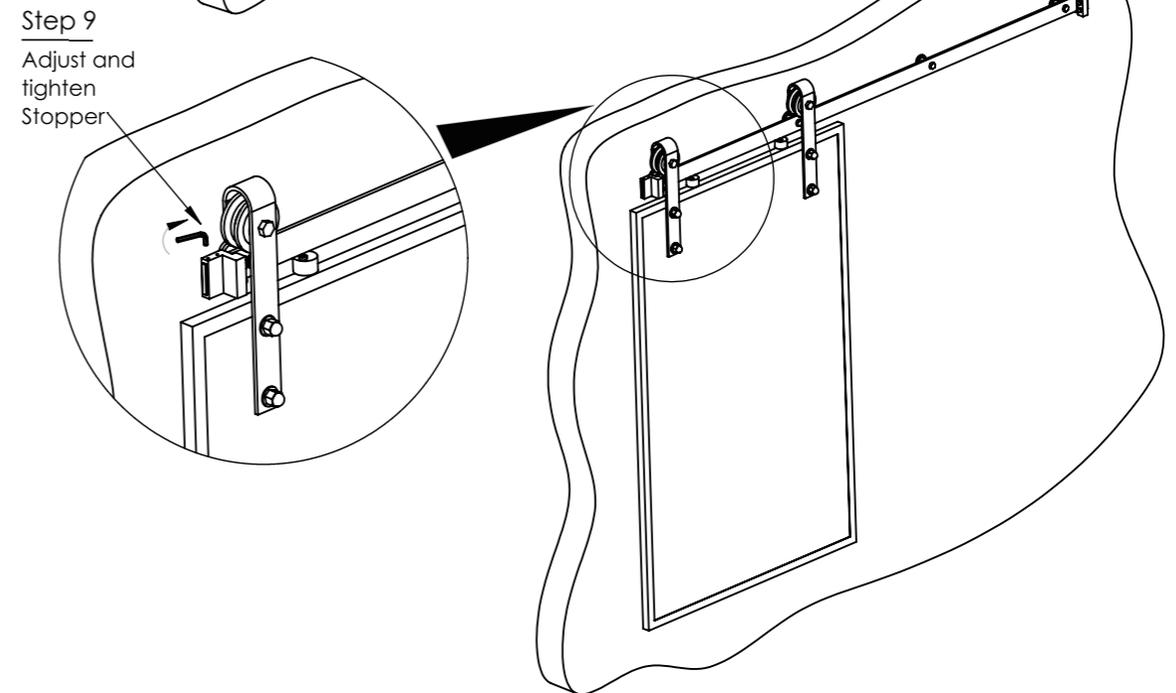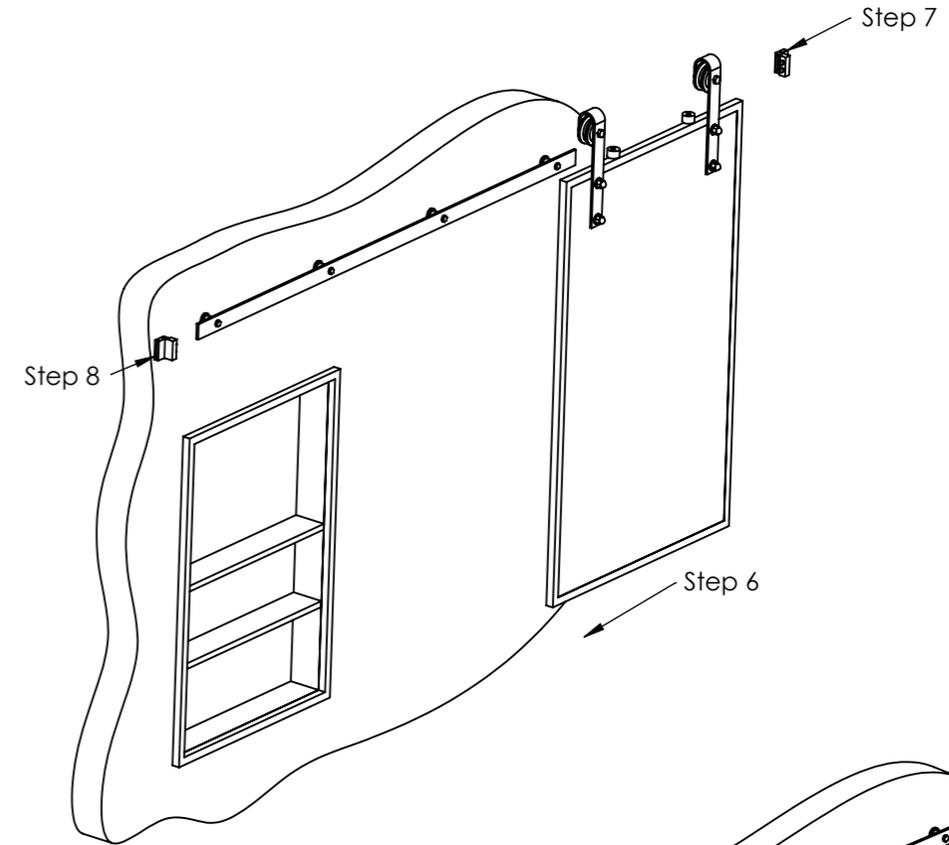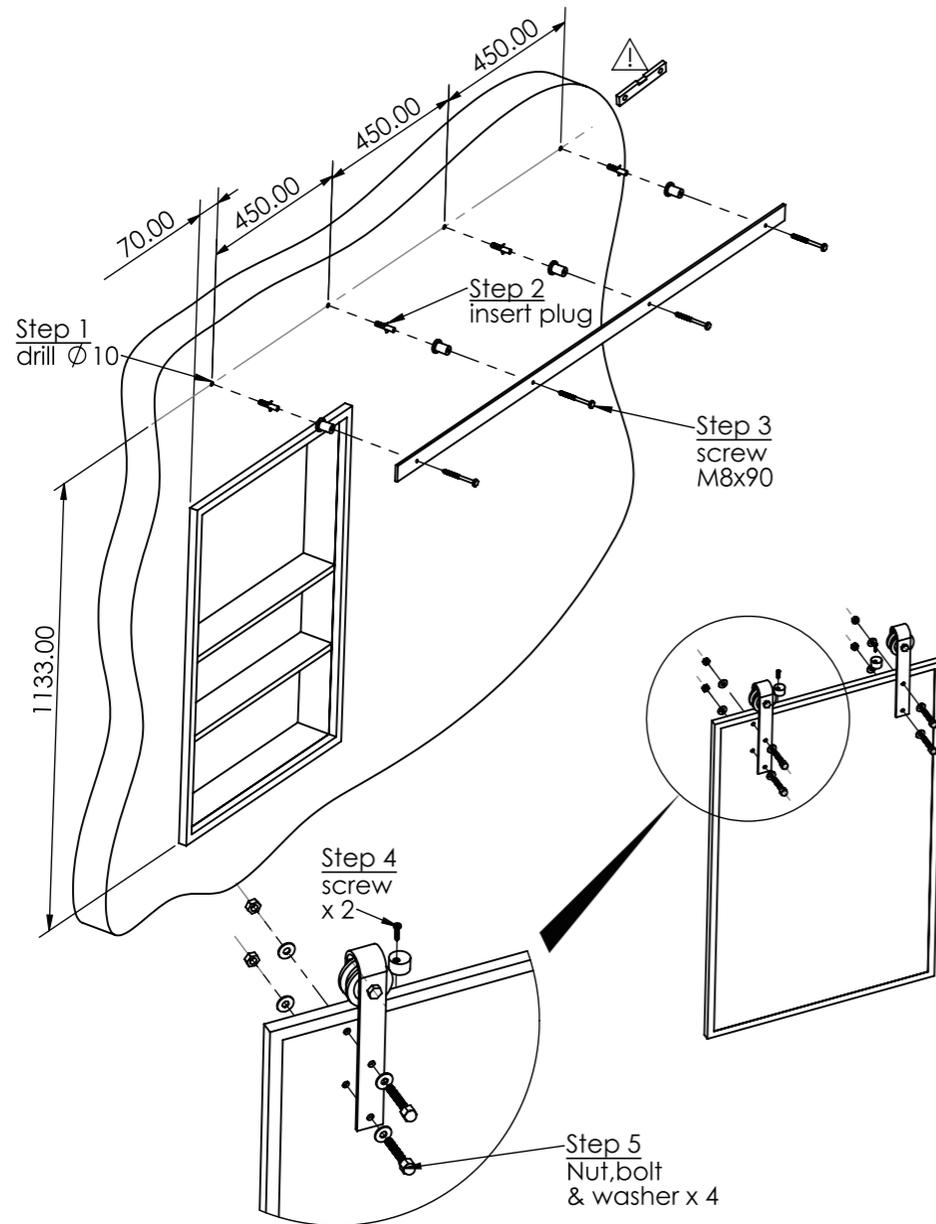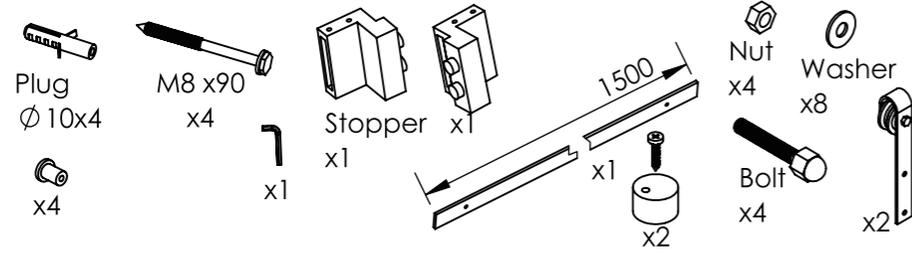

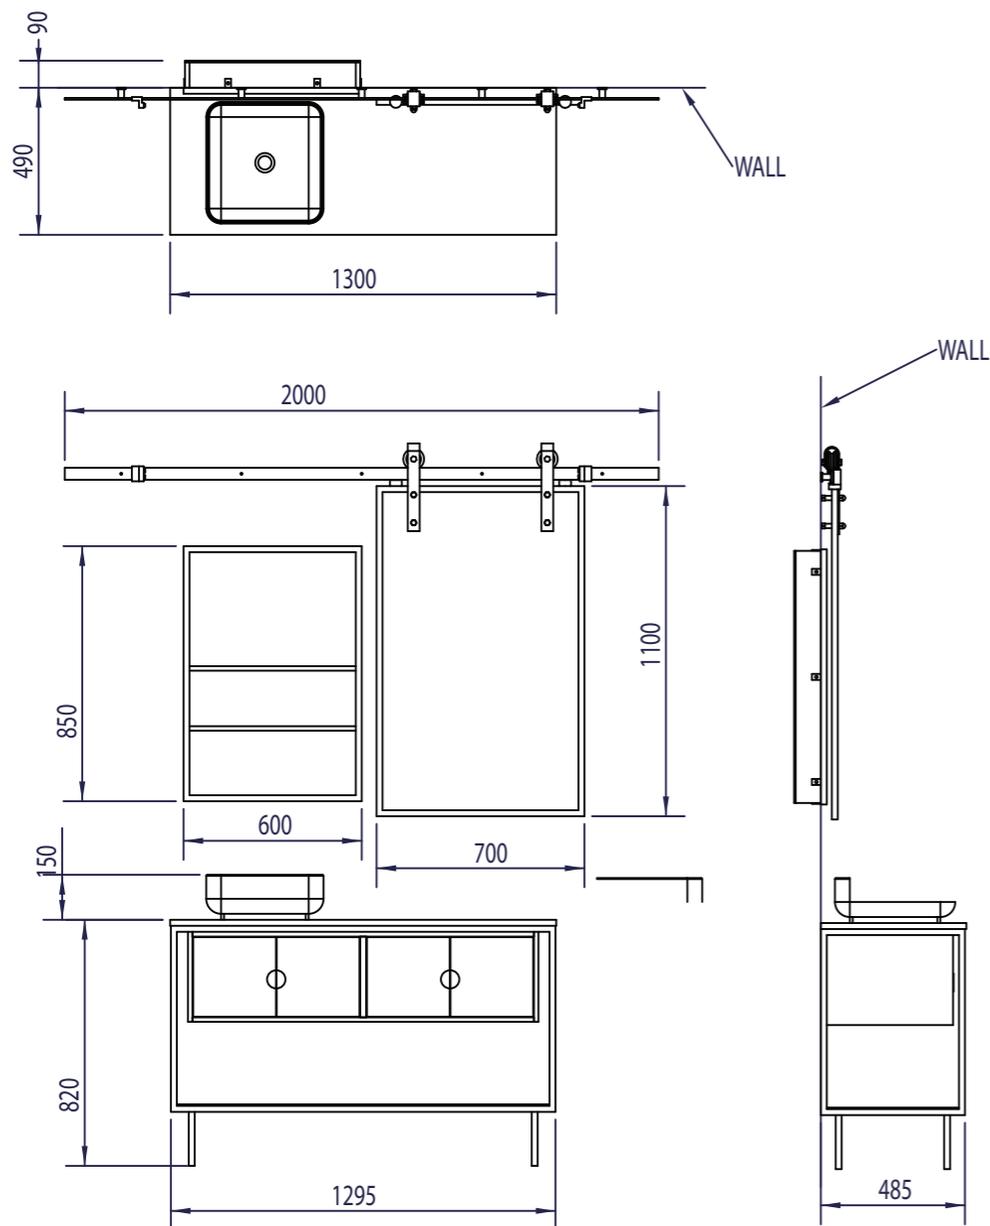

Dimensions are approximate. Information provided with this drawing is representative of the actual product available at the time of production. Due to our policy of continuous product development, the designs and specifications depicted are subject to change without notice. Please confirm all particulars with your sales consultant prior to purchase. Each Benelli product is covered by a limited warranty. Full terms and conditions are available from your sales consultant or via our website.

CARE INSTRUCTIONS

to allow your products to remain as elegant as the day they were installed please read the guide below.

DOOR AND CABINET CARE:

Regular cleaning with a damp cloth is sufficient. Never use strong detergents or abrasive cleaners as this may damage the surface finish of your furniture.

GLASS CARE:

When cleaning glass panels or mirrors, use a cloth with approved window/glass cleaner. Do not use washing powders or any other substance containing abrasives, as these will scratch the glass. Bathroom furniture may deteriorate if subjected to heavy water spillage or prolonged condensation.

BASIN CARE:

To maintain your basin it is recommended to regularly clean your basin using a damp sponge with warm soapy water. Avoid using abrasive cleaners, ammonia-based products or bleaches as these products may damage the surface of your basin.

COUNTERTOP CARE:

For general cleaning, just use soap and water.
For stubborn stains, use a mild abrasive cleaner and wipe dry immediately.

www.benelliglobal.com.au