



Plug
Ø 10x4
x4

M8 x90
x4

Stopper
x1

1500
x1


Nut
x4
Washer
x8
Bolt
x4
x2

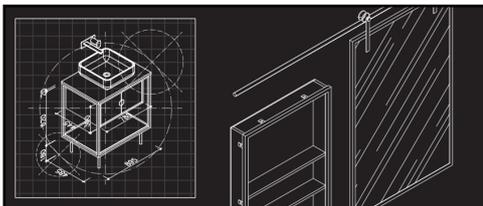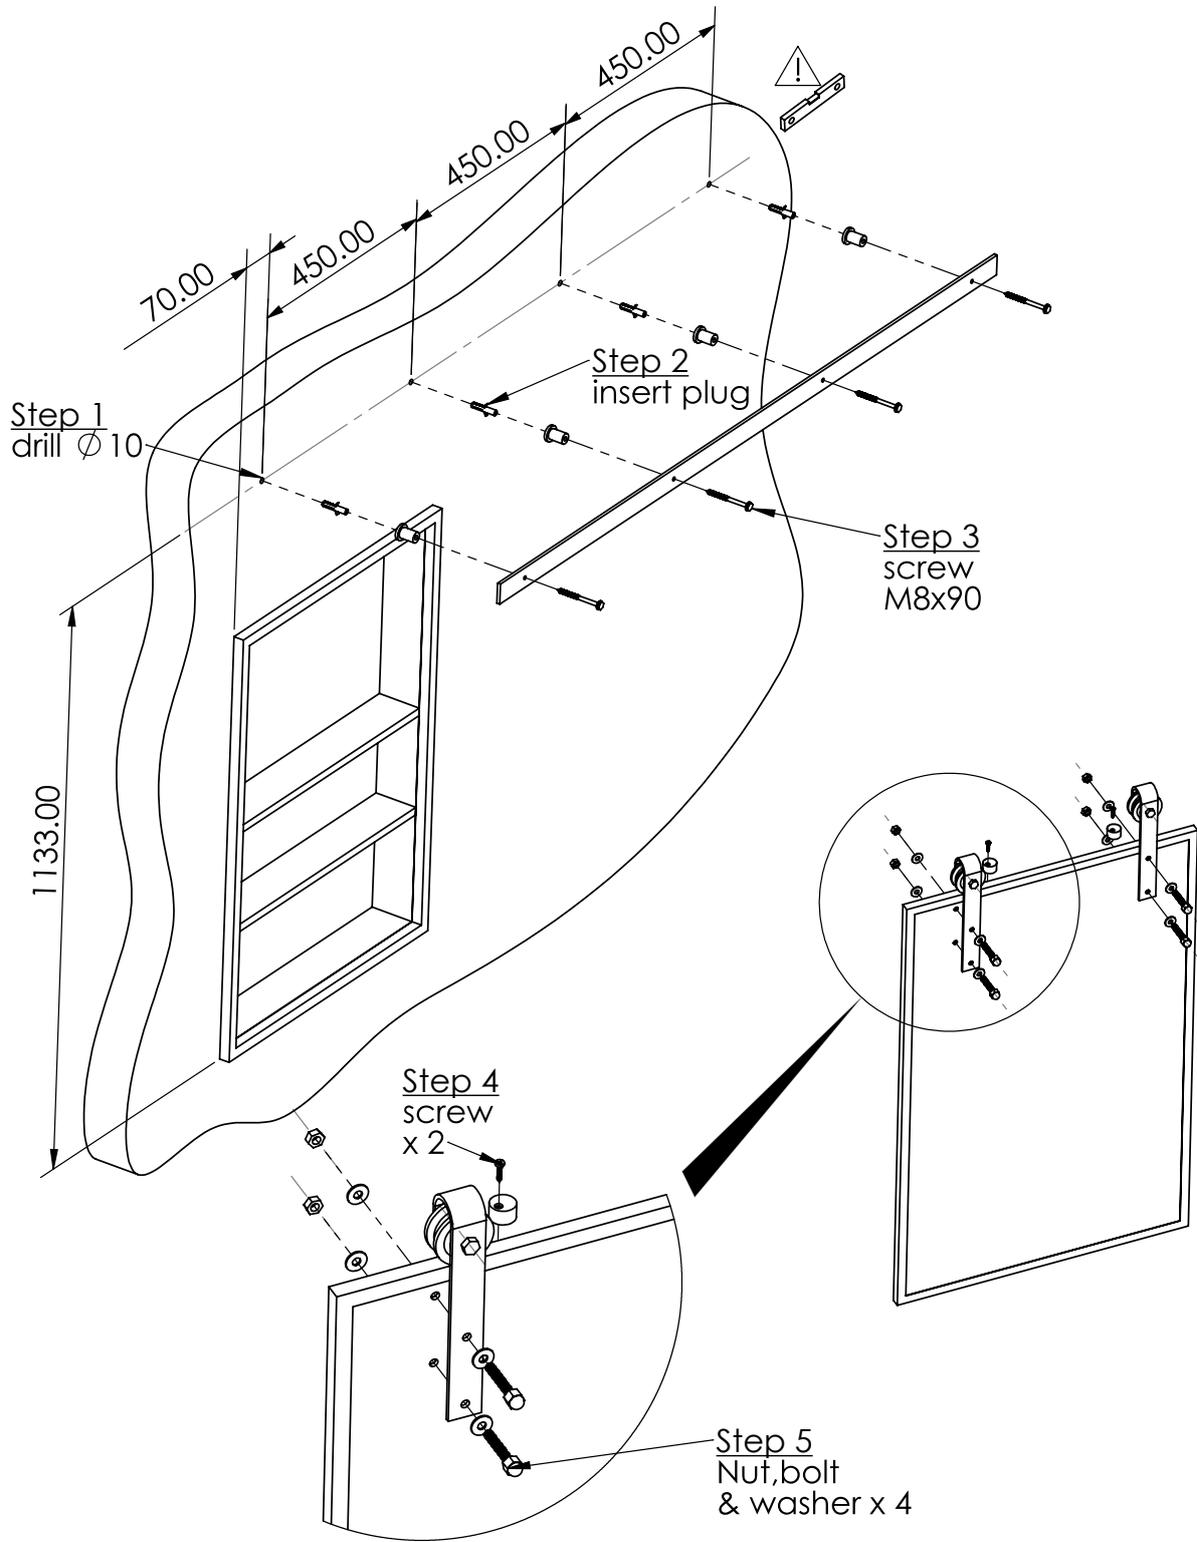




SLIDING MIRROR
Installation - Elli 700/900/1200

www.benelliglobal.com.au

SMIG01

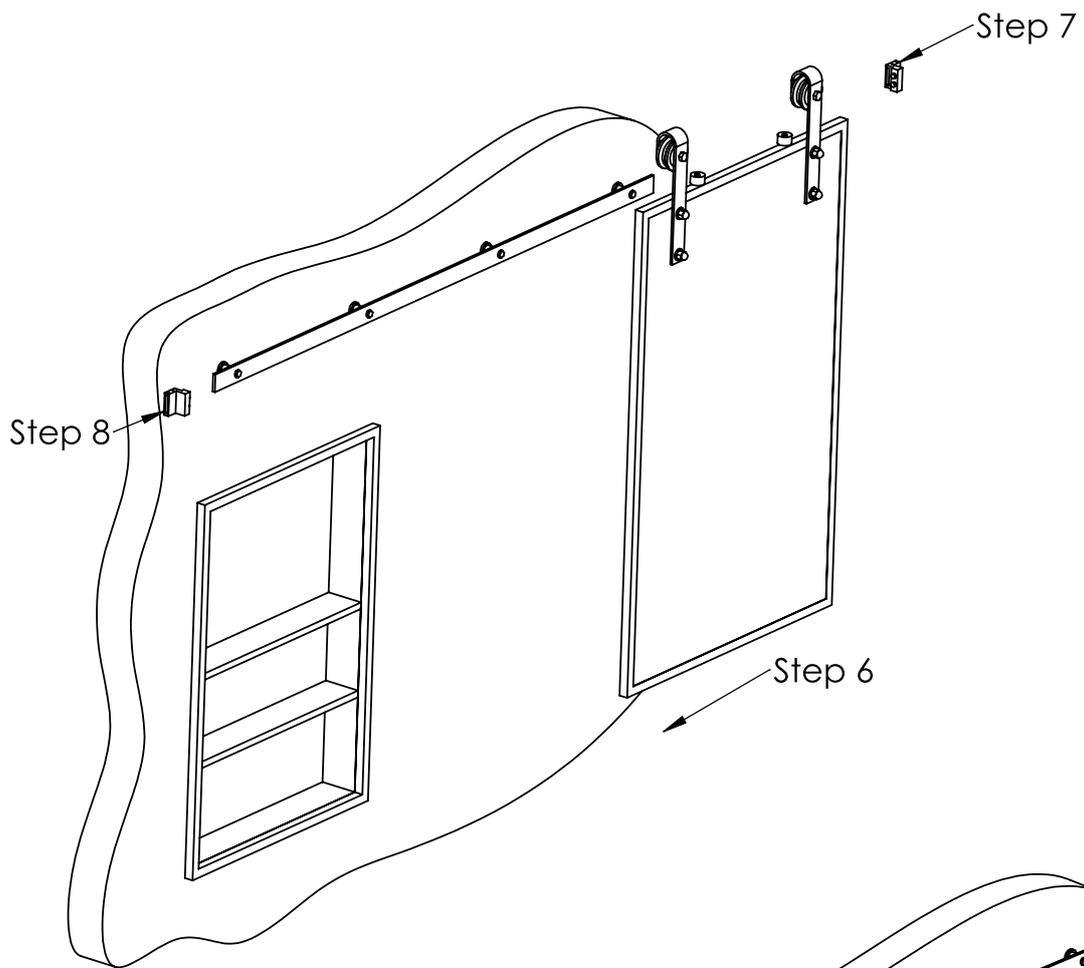

Step 9
Adjust and
tighten
Stopper

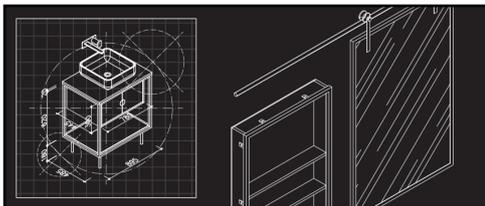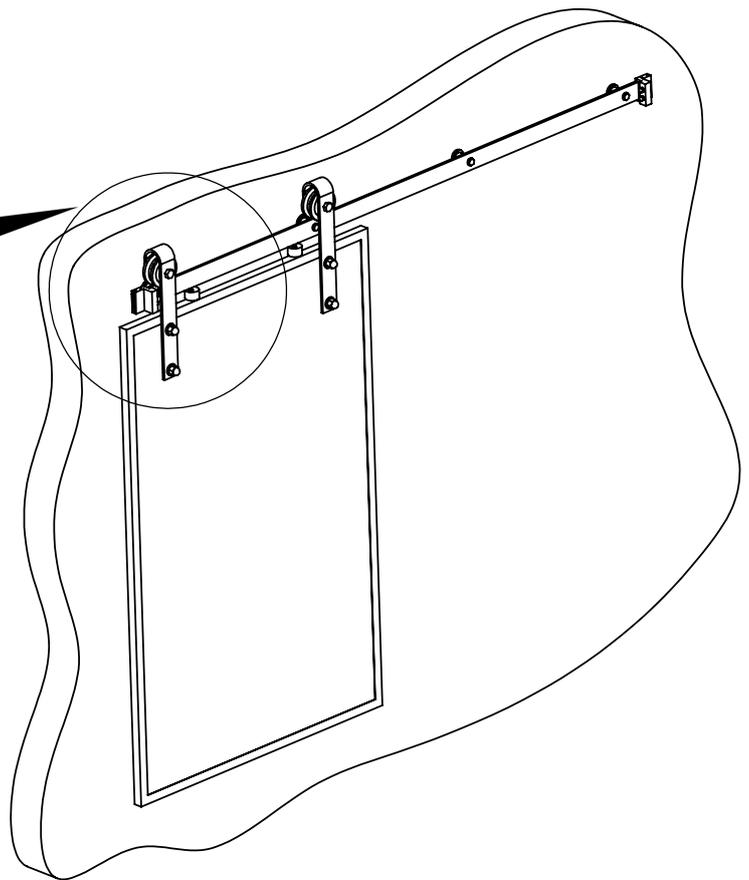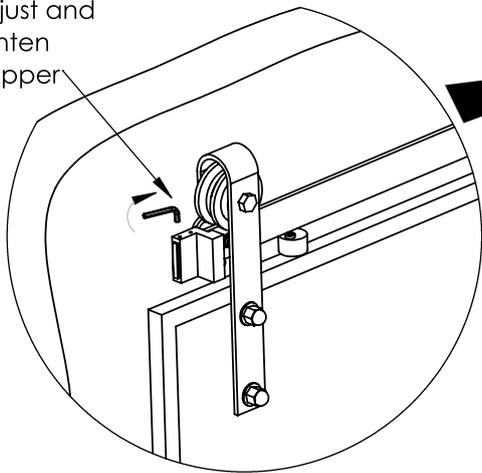

SLIDING MIRROR
Installation - Elli 700/900/1200

www.benelliglobal.com.au

SMIG02